

7. P14x CASE DIMENSIONS

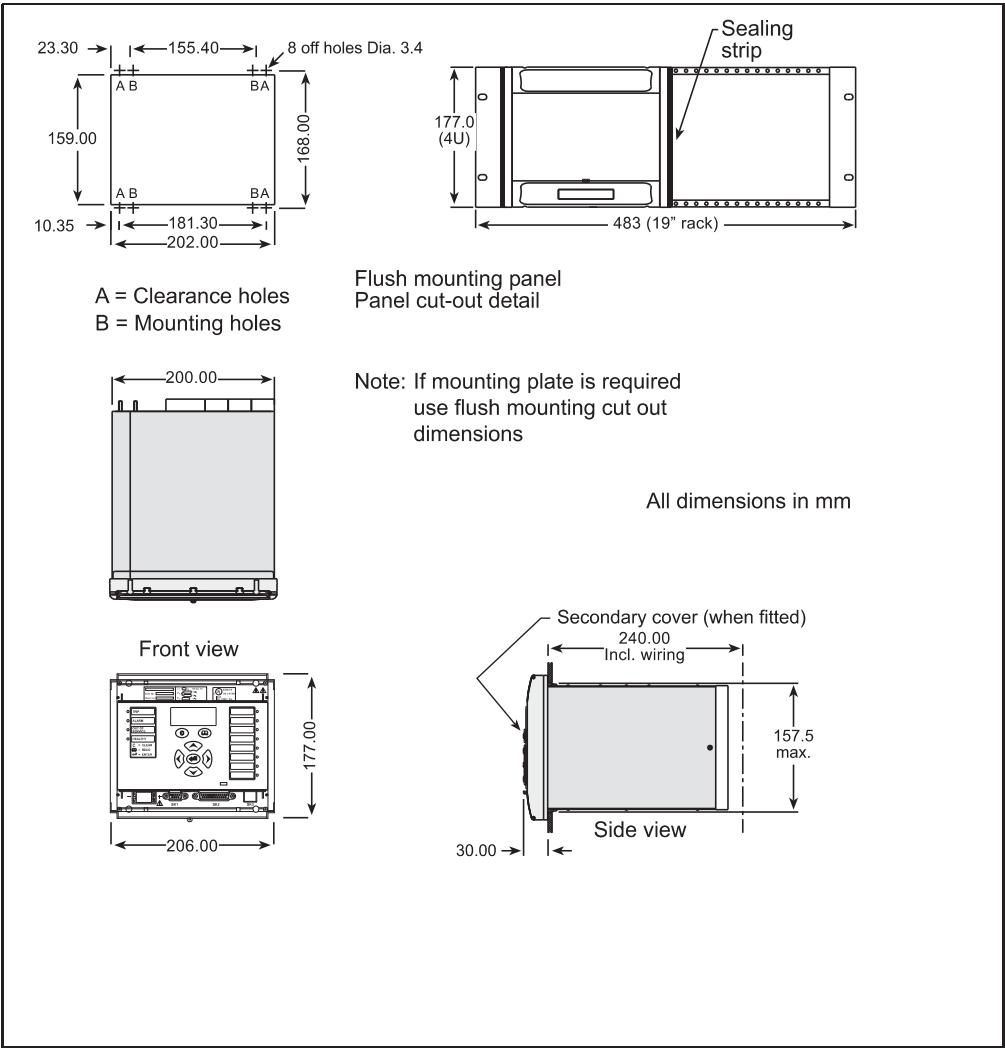


Figure 3 P141/P142 Case dimensions

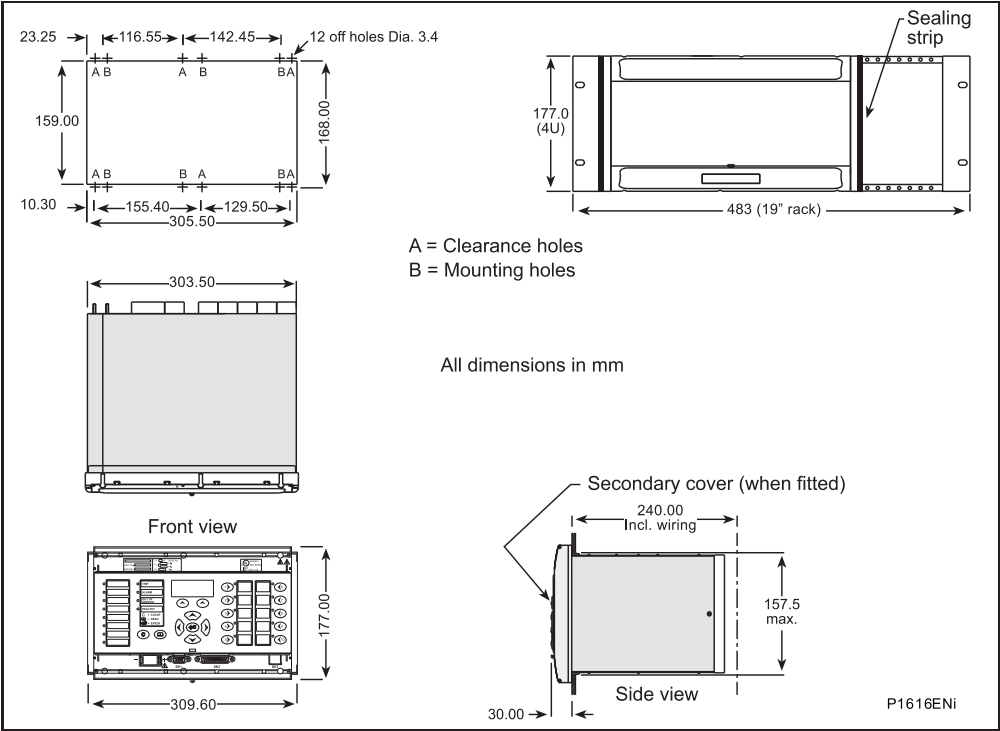


Figure 4 P143/P145 Case dimensions

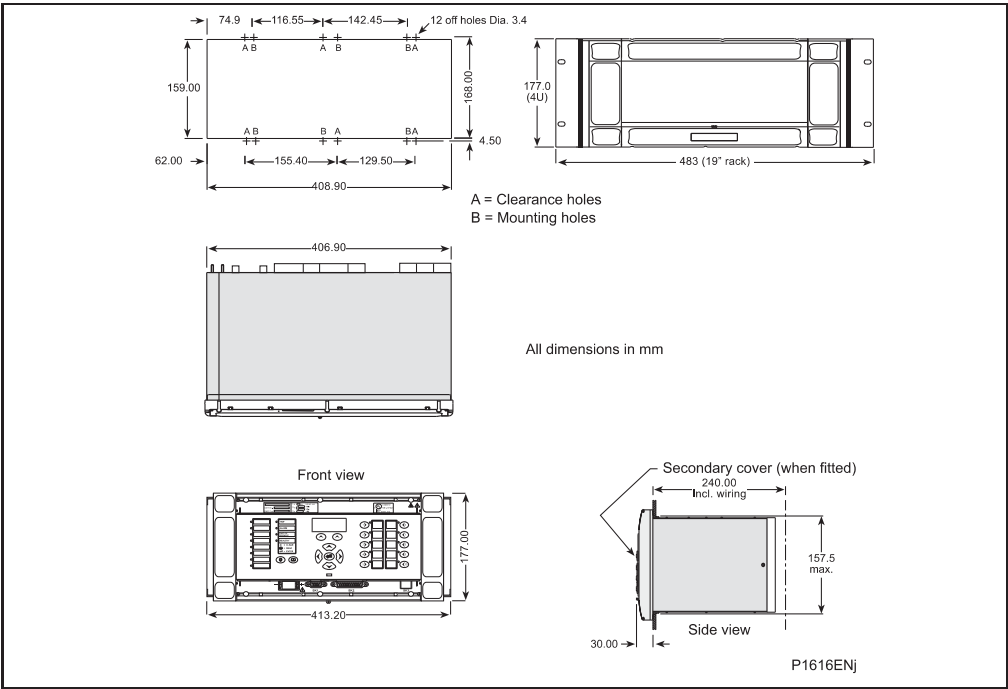


Figure 4A P143 with 32I + 32O Case dimensions

8. P14x 2ND REAR COMMUNICATION BOARD CONNECTION DIAGRAM

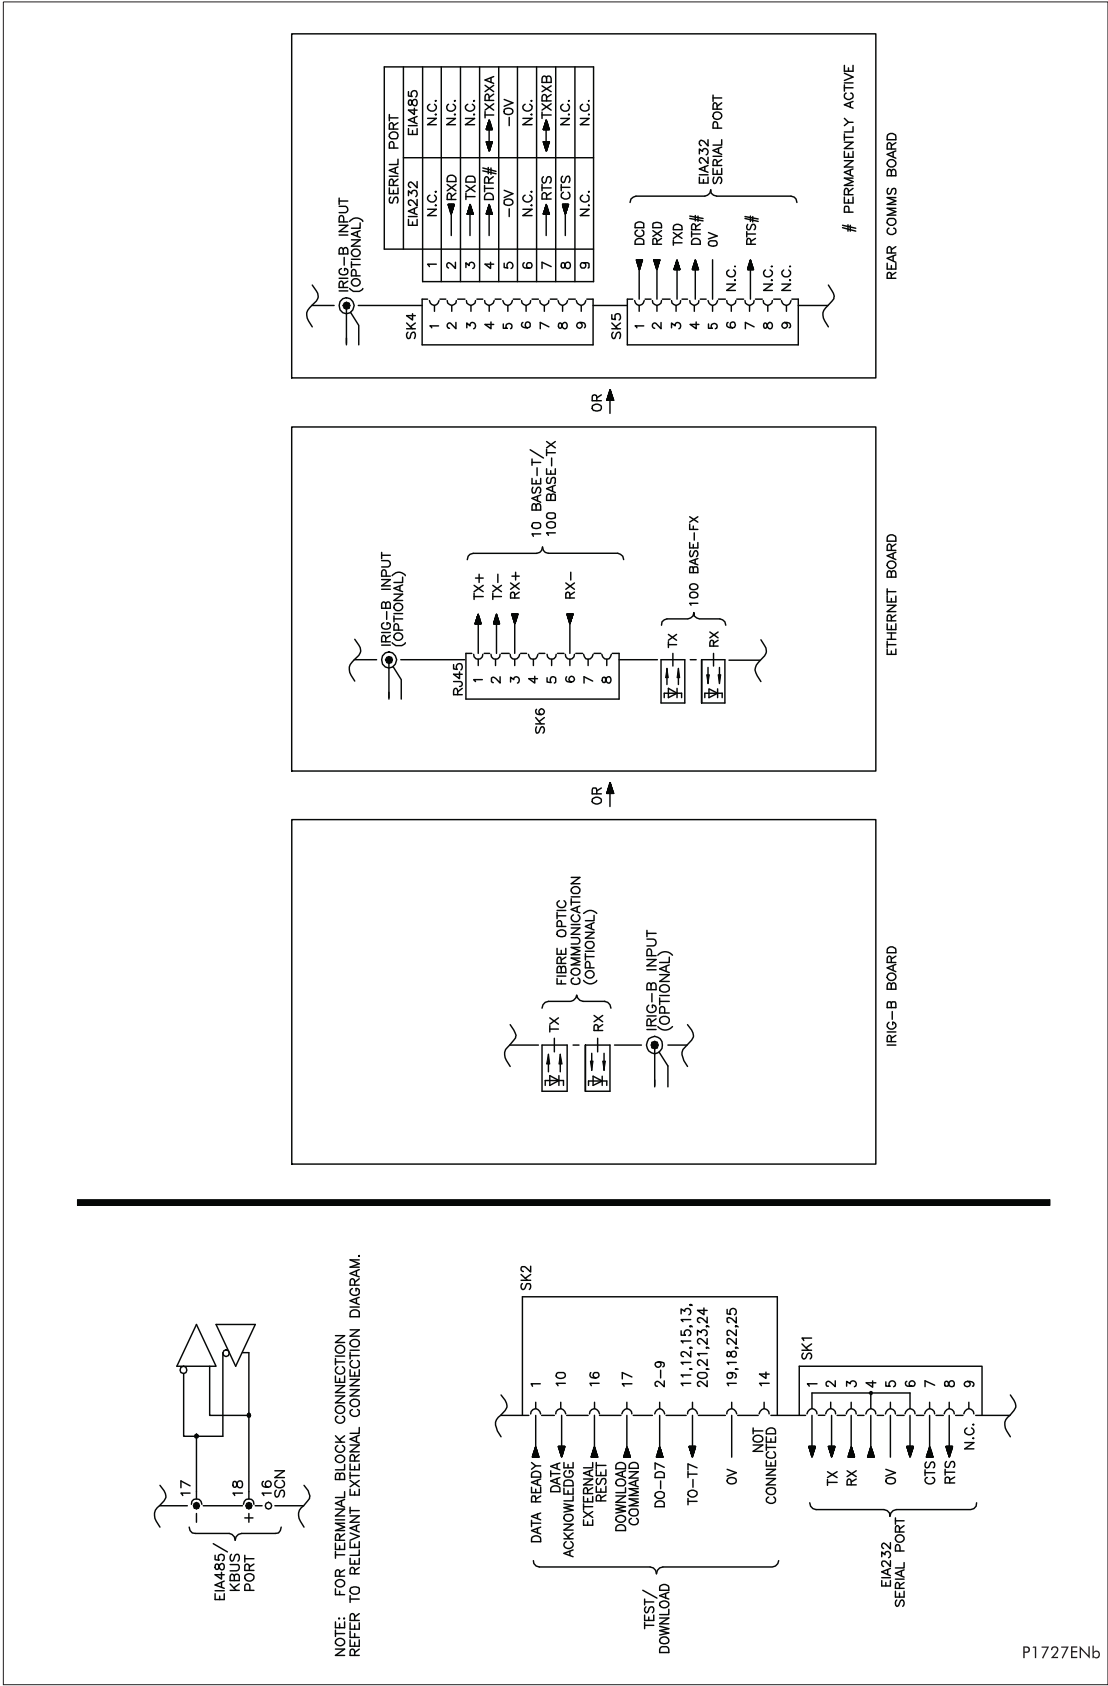


Figure 5 P14x second rear port connection

9. EXTERNAL CONNECTION DIAGRAMS

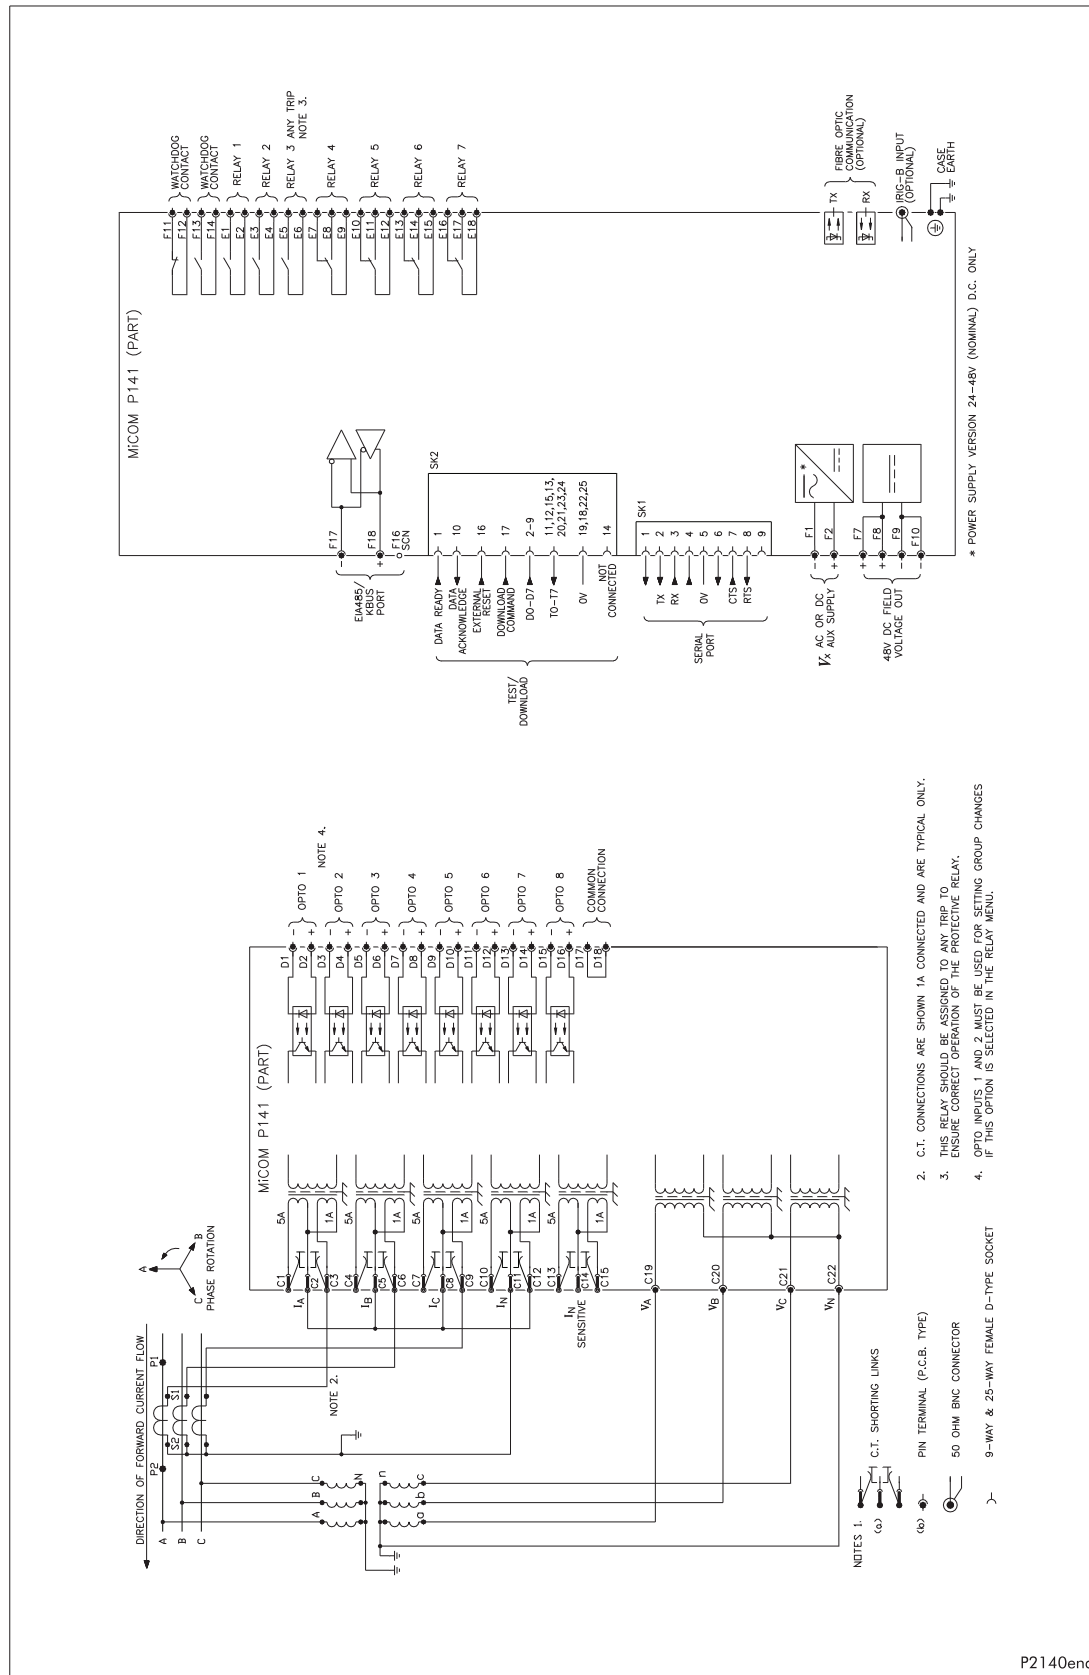


Figure 6 P141 Feeder Management Relay - Directional Phase Overcurrent and Earth Fault (8 I/P & 7 O/P)

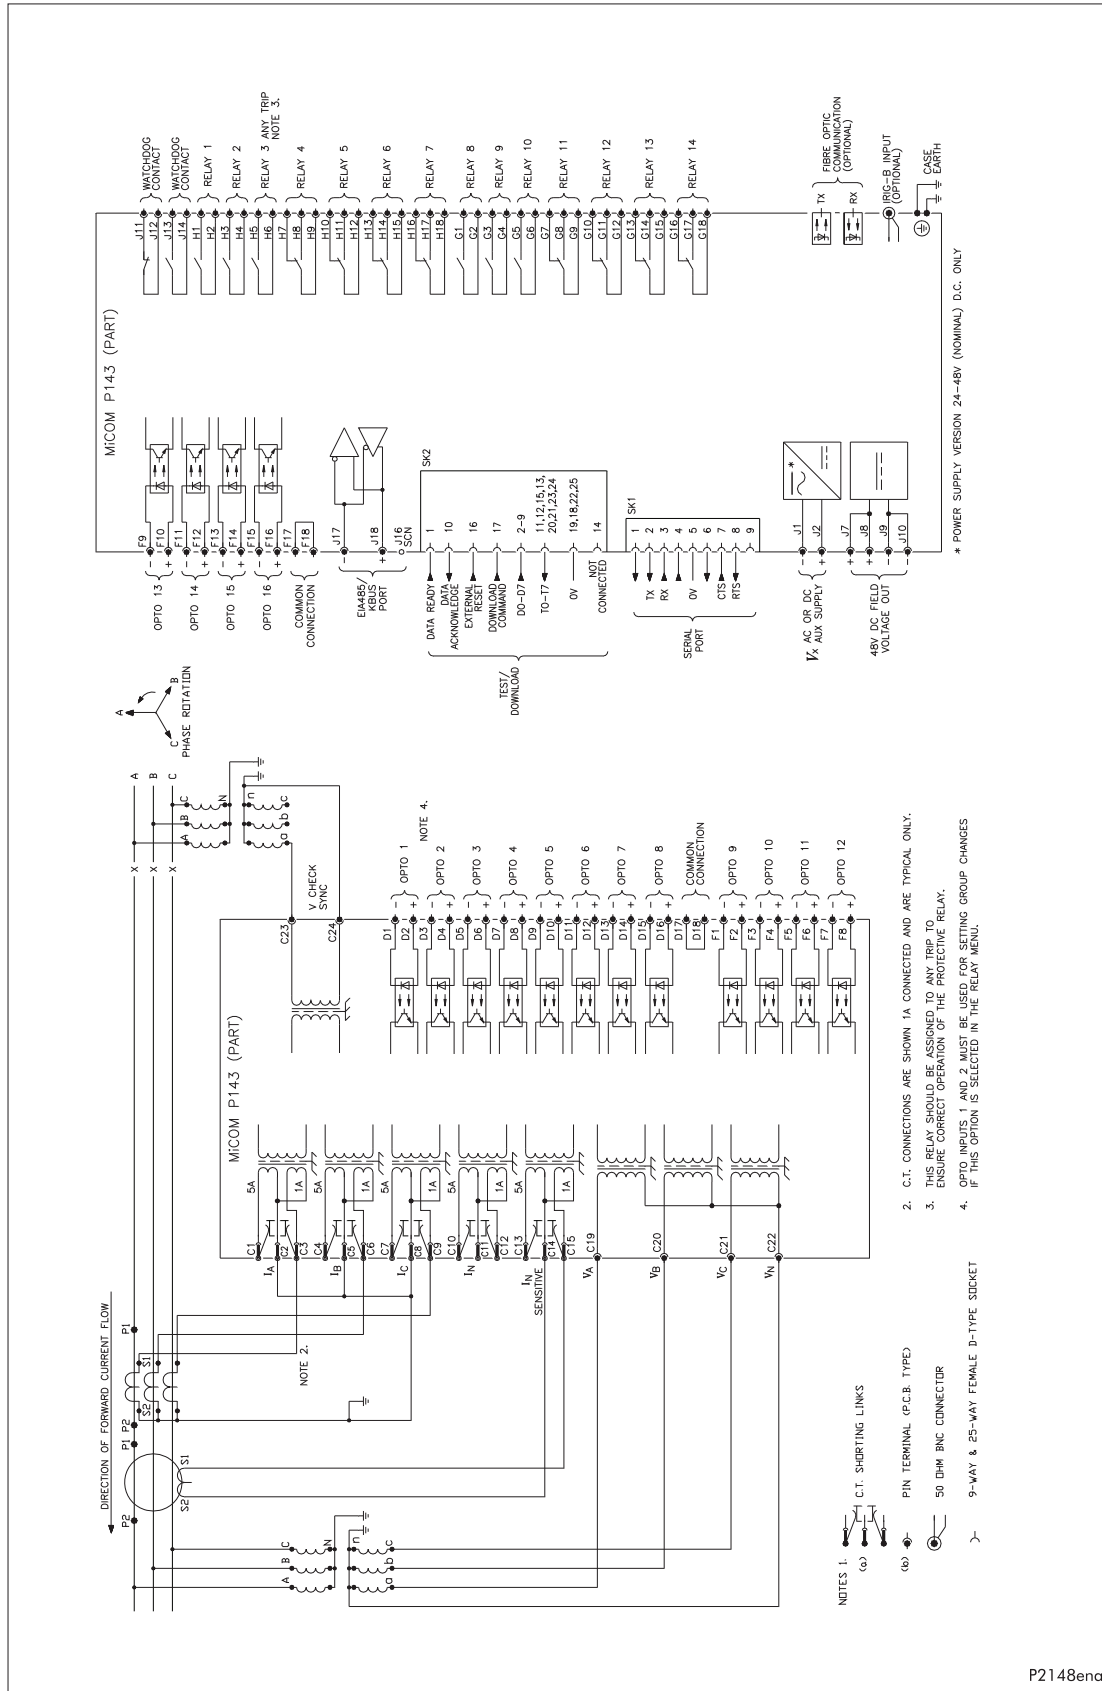


Figure 15 P143 Feeder Management Relay - Directional Phase Overcurrent and SEF with Auto-reclose and Check Synchronizing (16 I/P & 14 O/P)

P2148ena